


Brava Platform Lounge Seating


POWER MODULE INSTALLATION

Wood Base

Parts included

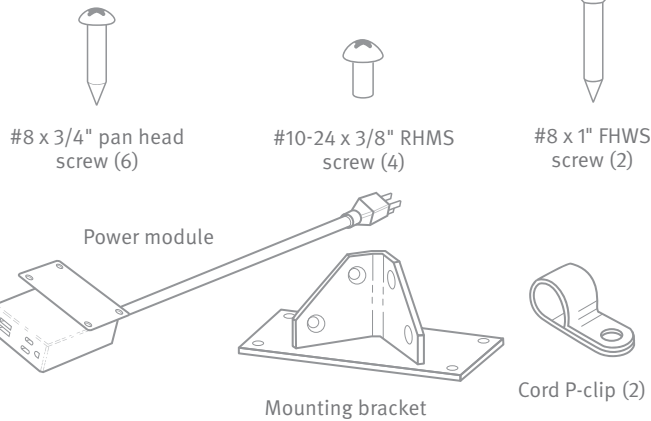

Tools required

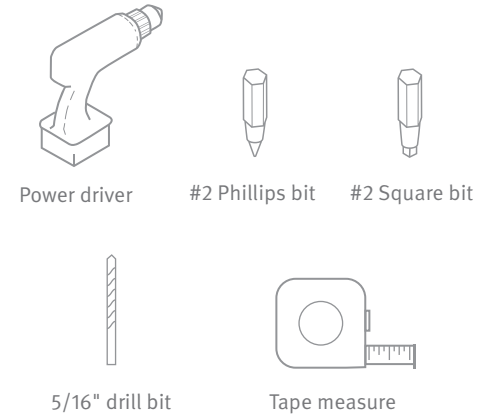


How to install your power module

Power module can be installed on either left or right facing side of chair.

Step 1

1. Find corner blocks underneath front edge of chair, then attach mounting bracket 13/16" to inside edge.
2. Using mounting bracket as a guide, locate threaded hole (blocked by corner block) and drill a 5/16" clearance hold, 3/8" deep.
3. Mount power module to mounting bracket with four #10-24 x 3/8" RHMS screws.
4. Secure to corner block using two #8 x 1" FHWS screws.

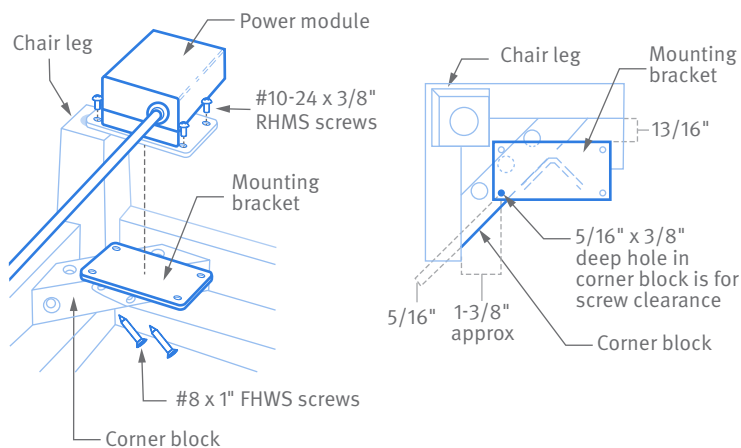

Step 2

1. Position cord P-clip around cord in desired location on or near edge of chair bottom.
2. Secure in place with one #8 x 3/4" pan head screw.
3. Repeat if needed to secure cord.

